

Deze handleiding bevat

Maak een ZPEAK toestelaccount aan Vraag het IP-adres van uw IP-toestel op Inloggen Configuratie-instellingen voor de GXP-21xx Inloggen Status Accounts Settings Network Product-afbeeldingen

In deze handleiding kun je lezen hoe je je Grandstream GXP21xx IP telefoons configureert met een VoIP-account van de ZPEAK telefooncentrale.



ZPEAK Overschiestraat 184 1062 XK Amsterdam Postadres Wiersedreef 26 3433 ZX Nieuwegein KVK: 62505017 **T** 0800-650 00 56 ma t/m vr 08.30 - 17.30u



1. Maak een ZPEAK toestelaccount aan

Voordat je de telefoon kunt instellen maak je op de ZPEAK centrale aan:

- een gebruiker (Extension)
- een toestel (Device) hier vind je ook de SIP-username en password

Voor meer informatie, raadpleeg de ZPEAK handleidingenbibliotheek.

2. Vraag het IP-adres van uw IP-toestel op:

Om op het IP-toestel in te loggen heb je het IP-adres nodig. Bij de meeste modellen GXP21xx toestellen vind je het IP-adres in het display. Een IP-adres heeft de volgende structuur: 192.168.1.105

Inloggen:

- Vraag het IP-adres van het toestel op
- Ga naar internet en toets het adres met de puntjes in de browser-adresbalk in
- Het standaard wachtwoord is [admin]
- Na inloggen kom je gelijk op tab [advanced Settings]

Configuratie-instellingen voor de GXP-21xx

Schermprint van alle tabbladen met aandachtspunten:



Inloggen:

- Vraag het IP-adres op en toets dit in in de browser
- Het inlogscherm verschijnt.
- Log in: het default password is [admin].

Grändstream	GXP2110 Executive IP Phone
Password Language	★ Login English ▼



<u>Status:</u>

In de webinterface van de GXP-toestellen zie je bovenaan een aantal tabbladen staan. Default kom je terecht op tabblad [Status]: hier vind je gegevens over het toestel en haar huidige inzet

					Admin Logout Re
Statu	s Accounts	Settings	Network	Maintenance	Phonebook
Accou	nt Status				
Account	SIP Hear I	D	SID Server	SID Dog	istration
Account 1	Jan User I		oby callunin nl	VES	isuation
Account 2	uninexo ia	lucu	pox.camoip.m	NO	
Account 3				NO	
Account 4				NO	
Account		1992/1992/1993		iiio	
				Copyright @ Gran	dstream Networks, Inc. 201
					Admin Logout Rel
Statu	s Accounts	Settings	Network	Maintenance	Phonebook
Notwo	wk Status				
Netwo	JIK Status				
	MAC Address	00:0B:82:	28:33:80		
	IP Setting	Static IP			
	Thus Address	102 169 1	7 150		
	IPV4 Address	192.108.1	7.150		
	IPv6 Address	0:0:0:0:0:0:	0:0:0		
	Subnet Mask	255.255.25	55.0		
	Gateway	192.168.17	7.254		
	DNS Server 1	8.8.8			
	DNS Server 2	8.8.4.4			
	NTP Server	us.pool.ntr	o.org		
	an ourse				
	DOD F LINE UN	Disabled			
	PPPoE Link Up	Unknown f	VAT		
80	PPPoE Link Up 02.1q/802.1p (LLDP)	Disabled Unknown I No	NAT		
86	PPPoE Link Up 02.1q/802.1p (LLDP) 802.1q/VLAN Tag	Disabled Unknown I No Unassigner	NAT d		
81	PPPoE Link Up 02.1q/802.1p (LLDP) 802.1q/VLAN Tag 802.1q Priority	Disabled Unknown f No Unassigned Unassigned	VAT d		
SI NAT TRAVE	PPPoE Link Up D2.1q/802.1p (LLDP) 802.1q/VLAN Tag 802.1q Priority	Disabled Unknown f No Unassigner	d d		
80 NAT Trave	PPPoE Link Up D2.1q/802.1p (LLDP) 802.1q/VLAN Tag 802.1q Priority rsal	Disabled Unknown I No Unassigner	d d		
80 NAT Trave	PPPoE Link Up 02.1q/802.1p (LLDP) 802.1q/VLAN Tag 802.1q Priority rsal Account 1	Disabled Unknown I No Unassigned Unassigned	d d	Hier ziet u he	t aantal accounts
80 NAT Trave	PPPoE Link Up 02.1q/802.1p (LLDP) 802.1q/VLAN Tag 802.1q Priority rsal Account 1 Account 2	Disabled Unknown I No Unassigner Unassigner Keep-Alive No	d d	Hier ziet u he van het toest	t aantal accounts el en welke
80 NAT Trave	PPPoE Link Up 02.1q/802.1p (LLDP) 802.1q/VLAN Tag 802.1q Priority rsal Account 1 Account 2 Account 3	Disabled Unknown I No Unassigned Unassigned Keep-Alive No	d d	Hier ziet u he van het toest daarvan gere	t aantal accounts el en welke gistreerd zijn. Da in maar ook
80 NAT Trave	PPPoE Link Up 02.1q/802.1p (LLDP) 802.1q/VLAN Tag 802.1q Priority rsal Account 1 Account 2 Account 3 Account 4	Disobled Unknown I No Unassignei Unassignei Keep-Alive No No	d d	Hier ziet u he van het toest daarvan gere kan er één zi meer.	t aantal accounts el en welke gistreerd zijn. Da in maar ook



Grandstream GXP2110						Admin Logout	Reboot English
Gandstream	Status	Accounts	Settings	Network	Maintenance	Phonebook	
		State of State of State	In the second second			and the second	Version 1.0.6.7
Status	System	Info					
Network Status		Product Model	GXP2110				
System Info		Part Number	962000200	2A			
	Software Vers	ion		C. The same of the	State Street Street	11. II	
		Boot	1.0.0.10				
		Core	1.0.6.2		Check	hier de firmwai	reversie;
		Base	1.0.6.3		Instel	lingen (Settings)→
		Prog	1.0.6.7	K	tabbla	id Geavanceerde	e d
		Aux	1.0.1.8		Settin	gs)	
		Dsp	0.88				
	System Time						
		System Up Time	5 min				
		System Time	12:58PM Sun 06/15/	2014			
	Service Status						
		gui	MEM: 833	2			
		phone	MEM: 955	2			
	Core Dump					ness V. Sins	
		Core Dump	CLEAR				
					Copyright @ Gran	idstream Networks, Inc. 2	2014. All Rights Reserved.



<u>Accounts</u>

Bij Accounts kun je in een aantal aparte menu's de instellingen doen om uw ZPEAK account in te stellen

Grandstream GXP2110				Admin Logout Ret	oot English 🔹
O.					
Arandstream	Status Accounts	Settings Network	Maintenance	Phonebook	
					Version 1.0.6.7
Accounts	anoral Sottings	v.			
Account 1 -	eneral Settings	<u> </u>			
General Settings	Account Active	💿 No 🖲 Yes	Γ	Vult u deze velde	en als volgt in:
Network Settings	Account Name	014 Pedri	a marte com-	Account Active: YE	S
SIP Settings 🔶	SIP Server	pbx.callvoip.nl		Account Name: SIP Server:	verkort nummer + naam
Audio Settings	Sacandary STD Sarvar			Outbound Proxy:	pbx.callvoip.nl
Call Settings	Secondary Sur Server	An and a second s	3	SIP User ID*:	[SIP gebruikersnaam]
Account 2 +	Outbound Proxy	pbx.calivoip.nl		Auth. Password*:	[SIP password]
Account 4 +	SIP User ID	uvww8x81aucux	dia tanàna 1	Name:	Bedrijfsnaam + naam
	Authenticate ID	uvww8x81aucux		* deze dingen ku	int u op de Simmnl
	Authenticate Password	***	and the second	telefooncentrale	terugvinden.
	Name	Simmpl - helpdesk			
	Voice Mail UserID	*969000			
		Com Com and Analy D			
		Save Save and Apply R	eset	Voice Mail UserII	D: hier kunt u het nummer
and a second second second second			Copyright ©	neerzetten dat u m	noet bellen om uw
				Voor de persoonlij	en. ke voicemailbox belt u
				1233 (als deze is in	ngeschakeld).
				Voor de bedrijfsvoi gevolgd door bet v	cemailbox draait u 1233
				(default: laatste 4	cijfers van uw tel.nr.) dus
				bv: 12334050	
			L		
Apply Configuration	Changes				
Grandstream GXP2110	an inclusion and a second second second	and the second	An and a state of the state of the	Admin Logout Re	boot English
(0)					
Aandstream	Status Accounts	Settings Network	Maintenance	Phonebook	and the second second
	TRACTORISE STREET, STRE		narðs dikneilingir að		Version 1.0.6.7
Accounts	etwork Setting	S			
Account 1 -	DUS Mode	A Pacard *			
Network Settings	DIS NOCE				
SIP Settings 🔶	Primary IP				
Audio Settings	Backup IP 1				
Call Settings	Backup IP 2				
Account 2 +	NAT Traversal	Keep-Alive •			
Account 3 +	Proxy-Require				
Account 4 +		Save Save and Apply F	leset		
		Contraction of the local division of the loc			

ZPEAK Handleiding configuratie - Grandstream GXP21xx

Copyright @ Grandstream Networks, Inc. 2014. All Rights Reserve



Apply Configuration Changes.			APPLY		
randstream GXP2110	warphilling an		line production of the	Admin Logout Reboo	English
O.					
Andstream Status Accounts	Settings	Network	Maintenance	Phonebook	
					Version 1.0.6
Basic Settings					
Account 1 -					
General Settings TEL U	IRI 🛞 Disab	oled 🛛 User=ph	one 🔍 Enabled		
Network Settings SIP Registration	on © No @	🖲 Yes			
SIP Settings Unregister on Rebo	ot ® No @	Ves			
Basic Settings Register Expirati	on 15				
Advanced Features	00 0				
Session Timer					
Security Settings Local SIP Po	ort 5074				
Audio Settings Retry Wait Tin	me 20				
Call Settings SIP T1 Timeo	ut 1 sec	•			
Account 2 + SIP T2 Timeo	ut 4 sec	•			
Account 3 + SIP Transpo	ort 🖲 UDP	© TCP ◎ TLS/	ТСР		
Account 4 + SIP URI Scheme When Usi	ng 💿 sip @	sips			
Use Actual Ephemeral Port Contact with TCP/T	in ® No () Yes			
Remove OBP from Rou	ite 🛞 No 🔇	9 Yes			
Support SIP Instance	ID 🛞 No 🤇) Yes			
SUBSCRIBE for M	WI ® No @) Yes			
SUBSCRIBE for Registrati	on ® No () Yes			
Enable 100	rel 🛞 No 🤇	🔍 Yes			
Caller ID Displ	lay 🛞 Auto	Disabled O	From Header		
Use Privacy Head	ler 🖲 Defa	ult O No O Ye			
Use P-Preferred-Ident Head	ity 💿 Defa	ult 🛛 No 🔍 Ye			
	Save S	ave and Apply	Reset		
			Copyright @ G	randstream Networks, Inc. 2014	All Rights Reserve
na haran a tana a sa sana in ili sa dalayon nina secologi kasing	ola wani				

Account 1 -		
General Settings Network Settings SIP Settings Basic Settings	Broadsoft Call Center Hoteling Event Call Center Status PUBLISH to Call Center	No ▼ ● No © Yes ● No © Yes ● No © Yes
Advanced Features Session Timer Security Settings Audio Settings	Feature Key Synchronization Line-seize Timeout Eventlist BLF URI	Disabled Enabled
Account 2 + Account 3 + Account 4 +	Conference URI Music On Hold URI BLF Call-pickup Prefix PUBLISH for Presence	***



	Session Timer	
ccount 1 -		
General Settings	Session Expiration	180
Network Settings	Min-SE	90
SIP Settings	Caller Request Timer	® No ○ Yes
Basic Settings	Callee Request Timer	a No O Yor
Advanced Features	callee Request filler	© NO © TES
Session Timer	Force Timer	No ◎ Yes Yes
Security Settings	UAC Specify Refresher	UAC UAS Omit (Recommended)
Audio Settings	UAS Specify Refresher	⊛ UAC © UAS
Call Settings	Force INVITE	🖲 No 🔘 Yes
Account 2 +		
Account 3 +		Save Save and Apply Reset
ccount 4 +		
counts	Security Settings	
counts Account 1 -	Security Settings	1000 - 1000 - 1000 - 1000 - 1000 - 1000 - 1000 - 1000 - 1000 - 1000 - 1000 - 1000 - 1000 - 1000 - 1000 - 1000 - 1
counts 	Security Settings	© No ® Yes
counts account 1 — General Settings Network Settings	Security Settings Check Domain Certificates Validate Incoming Messages	© No ⊛ Yes ⊛ No © Yes
counts ccount 1 — General Settings Network Settings SIP Settings —	Security Settings Check Domain Certificates Validate Incoming Messages Check SIP User ID for	© No ® Yes ® No © Yes ® No © Yes
counts coount 1 - General Settings Network Settings SIP Settings - Basic Settings	Security Settings Check Domain Certificates Validate Incoming Messages Check SIP User ID for Incoming INVITE Accept Incoming SIP from	© No * Yes * No © Yes * No © Yes * No © Yes
Counts Count 1 - General Settings Network Settings SIP Settings = Basic Settings Advanced Features	Security Settings Check Domain Certificates Validate Incoming Messages Check SIP User ID for Incoming INVITE Accept Incoming SIP from Proxy Only Authenticate Incoming	© No ® Yes ® No © Yes ® No © Yes ® No © Yes
Counts Count 1 General Settings Network Settings SIP Settings Basic Settings Advanced Features Session Timer	Security Settings Check Domain Certificates Validate Incoming Messages Check SIP User ID for Incoming INVITE Accept Incoming SIP from Proxy Only Authenticate Incoming INVITE	© No @ Yes @ No © Yes @ No © Yes @ No © Yes @ No © Yes
counts coount 1 — General Settings Network Settings SIP Settings = Basic Settings Advanced Features Session Timer Security Settings	Security Settings Check Domain Certificates Validate Incoming Messages Check SIP User ID for Incoming INVITE Accept Incoming SIP from Proxy Only Authenticate Incoming INVITE	 No * Yes No Yes No Yes No Yes No Yes No Yes Save and Apply Reset
counts count 1 General Settings Network Settings SIP Settings Basic Settings Advanced Features Session Timer Security Settings Audio Settings	Security Settings Check Domain Certificates Validate Incoming Messages Check SIP User ID for Incoming INVITE Accept Incoming SIP from Proxy Only Authenticate Incoming INVITE	 No * Yes No Yes No Yes No Yes No Yes No Yes Save Save and Apply Reset
counts count 1 General Settings Network Settings SIP Settings Basic Settings Advanced Features Session Timer Security Settings Audio Settings Call Settings	Security Settings Check Domain Certificates Validate Incoming Messages Check SIP User ID for Incoming INVITE Accept Incoming SIP from Proxy Only Authenticate Incoming INVITE	 No Yes No Yes Save Save and Apply Reset
counts count 1 - General Settings Network Settings SIP Settings Basic Settings Advanced Features Setsion Timer Security Settings Audio Settings Call Settings coount 2 +	Security Settings Check Domain Certificates Validate Incoming Messages Check SIP User ID for Incoming SINVITE Accept Incoming SIP from Proxy Only Authenticate Incoming INVITE	 No @ Yes No @ Yes @ No @ Yes @ No @ Yes @ No @ Yes Save and Apply Reset
counts counts count 1 General Settings Network Settings SIP Settings Basic Settings Advanced Features Setsion Timer Security Settings Audio Settings Call Settings cocount 2 + coount 3 +	Security Settings Check Domain Certificates Validate Incoming Messages Check SIP User ID for Incoming SIP/IVITE Accept Incoming SIP from Proxy Only Authenticate Incoming INVITE	 No @ Yes No @ Yes @ No @ Yes @ No @ Yes @ No @ Yes Save and Apply Reset



Grandstream GXP2110			Admin Logo	t Reboot English 🔻	
Grandstream Status Accou	unts Settings Network	Maintenance	Phonebook		
				Version 1.0.6.7	
Accounts Audio Settin	gs			DTMF heeft te ma	ken met het
Account 1 -	d DTME 🛛 🗑 in audio 🗟 via RTR (PEC2922) = via STD 1	NEO	kunnen maken var	keuzes in
General Settings		KFC20557 18 51F 1	aro -	telefonische keuze	menu's.
SIP Sattions	ad type 101			Preferrede Voco	ler: dit zijn de
Audio Settings	thoice 1 PCMA •			zogenaamde codeo	s die de
Call Settings	thoice 2 PCMU Y			spraakkwaliteit ber	balen.
Account 2 + Preferred Vocoder - c	thoice 3 PCMU *]		Simmpl gebruikt a	lleen codecs
Account 3 + Preferred Vocoder - c	choice 4 G.726-32 🔻]		codecs die van de	hoge ISDN
Account 4 + Preferred Vocoder - o	thoice 5 G.723.1 •]		kwaliteit uitgaan. l	J kunt deze
Preferred Vocoder - o	thoice 6 G.729A/B *	1		codecs bovenaan r	ioteren.
Preferred Vocoder - o	thoice 7 iLBC T	1			
Use First Matching V in 200	/ocoder OK SDP ® No © Yes	1			
SRT	P Mode No	•			
Crypto L	ife Time 💿 No 🖲 Yes				
Symmet	tric RTP 💿 No 🖲 Yes				
Silence Supp	oression 🔹 No 🔍 Yes				
Voice Frames	s per TX 2			VoiceFrames per In oude firmwares	TX: 2 kan deze een
672	23 Rate	ate 🖲 5.3kbps encodi	ng rate	andere waarde het	ben gehad;
6.726-32 Packin	g Mode ● ITU ◎ IETF			zet u deze dan teru	ug naar 2. Als
il DC Era	me Size 0 20ms 0 30ms			problemen hebben	at kunt u met uitbellen.
i De Pada	ad Turne 07			o.a. foutmelding	
ILBC Paylo	au type 97			488: Not acceptab	le here)
Jitter Buff	Adaptive V				
Jitter Buffer	Length 300ms V				
	Save Save and Apply	Reset			
		Convrint @ Gr	andstream Networks	Inc. 2014 All Pichts Reserved	
		copyright @ Gr	anosa cam networks,	no. 2014. Al Rights Reserved.	



Gándstream	Status Accounts S	Settings Network	Maintenance	Phoneboo	ok Version 1.0.6.7	
Accounts Account 1 General Settings Network Settings SIP Settings Call Settings Call Settings Account 2 Account 2 Account 3 Account 4 +	Call Settings Early Dial Dial Plan Prefix Dial Plan Oblayed Call Forward Wait Time Enable Call Features Call Log Account Ring Tone Match Incoming Caller ID	No Yes X+ *x+ *xx*x+ } No Yes No Yes Log Al Cals Log Al Cals Log Al Cals Disable Cal Log System Ring Tone Matching Rule	ng Only (missed cal System Ring Tone	lls NOT	Version 1.06.7 Hier kunt u diverse za die u zelf plezierig vin- wel/niet bijhouden var alle of de gemiste ges log), of u met of zond uitbelt (Send Anonyr lang het duurt voordal daadwerkelijk gaat be	ken instellen dt, zoals het n een log van prekken (Call er nummer nous), hoe t de telefoon llen na het umer (No Kov
	Ring Timeout Send Anonymous Anonymous Call Rejection Auto Answer	60	System Ring Tone		Entry Timeout), en o kunt intoetsen om de bellen aan te zetten (I Key).	f u ook de # telefoon tot Jse # as Dial
	Allow Auto Answer by Call- Info Refer-To Use Target Contact Transfer on Conference Hangup No Key Entry Timeout Use # as Dial Key	 No Yes No Yes 4 No Yes 		No Key I Aantal se intoetsen TIP: druk het toest	Entry Timeout: econden dat het toestel w nummer tot start met b k na intoetsen nummer op rel gelijk te laten starten	acht na ellen. p SEND of # om met bellen.
	Hold Method DND Call Feature On DND Call Feature Off	Auto RFC 3264 Save and Apply	Reset			

<u>Settings</u>

De settingspagina's bevatten een aantal handige en/of praktische instellingen. We laten je een paar schermen zien waarop wij aanpassingen adviseren voor



Settings	Progr	ammable Keys				
Call Features	Line Keys					
Ring Tone		Mode	Account	Description	Value	
Control	LINE 1	LINE	Account 1	Description	Valu	Hier kunt u instellen welke var
lisplay	LINE 2	LINE	Account 2	Description	Valu	accounts (nummers) bij welke
and Time	LINE 3	LINE	Account 3	Description	Valu	lijntoetsen (naast uw display) worden gebruikt
rvice	LINE 4	LINE	Account 4	Description	Value	
ications						
on Boards	– Multi-Pur	pose Keys				
1		Mode	Account	Description	Value	
2	MPK 1	Busy Lamp Field (BLF)	Account 1	Richard	001	
	MPK 2	Busy Lamp Field (BLF)	Account 1	Heleen	002	Keys op uw toestel insteller
	MPK 3	Busy Lamp Field (BLF)	Account 1	Jacob	003	voor BLF: zien of een colleg
	MPK 4	Busy Lamp Field (BLF)	Account 1	Herman	004	vrij is, gebeld wordt of in
	MPK 5	Busy Lamp Field (BLF)	Account 1	Ria	005	geopren is.
	MPK 6	Busy Lamp Field (BLF)	Account 1	Elly	006	Zie ook de aparte handleidi
	MPK 7	Busy Lamp Field (BLF)	Account 1	Ginette	007	voor Simmpl BLF instellinge
	MPK 8	Busy Lamp Field (BLF)	Account 1	Jeroen	008	
	MPK 9	Busy Lamp Field (BLF)	Account 1	• Jork	009	
	MPK 10	Rugel amp Field (PLE)	Account 1	lasner	010	
Grandstream • •	Sta	tus Accounts Settin	gs Network	Maintenance	Phonebook	Version 1.0.6.7
Randstream ings eneral Settings	Sta	tus Accounts Settin	gs Network	Maintenance	Phonebook	Version 1.0 5.7
dstream I Settings itures	Sta	tus Accounts Settin	gs Network Account	Maintenance Description	Phonebook	Version 1.0.8.7
istream I Settings tures ne	EXT 1 EXT 1 EXT 2	tus Accounts Settin Mode Speed Dial Seed Dial	gs Network Account Account	Maintenance Description Description Description Description	Value Value	Version 1.0.8.7
andstream as eral Settings Features Tone io Control Display	EXT 1 EXT 1 EXT 2 EXT 2	tus Accounts Settin Mode Speed Dial Speed Dial	gs Network Account Account Account Account Account Account	Maintenance Description Description Description Description Description Description Description Description	Phonebook Value Value Value Value Value Value	Version 1.0.8.7
s ral Settings eatures Fone control Display and Time	EXT 1 EXT 1 EXT 2 EXT 3 EXT 4	tus Accounts Settin Mode Speed Dial Speed Dial Speed Dial	gs Network Account Account Account Account Account Account Account Account Account	Maintenance Description	Value Value Value Value	Version 1.0.8.7
distream al Settings atures one Control Splay id Time envice	EXT 1 EXT 1 EXT 2 EXT 3 EXT 4 EXT 5	tus Accounts Settin Mode Speed Dial Speed Di	gs Network Account	Maintenance Description	Phonebook Value	Version 1.0.8.7
Addream ad Settings satures Control control spacy dependent cervice dependent cervice	EXT 1 EXT 1 EXT 2 EXT 2 EXT 3 EXT 4 EXT 5 EXT 6	tus Accounts Settin Mode Speed Dial Speed Di	gs Network Account	Maintenance Description	Phonebook Value	Version 1.0.5.7
Visition al Settings altures one Control Splay nd Time envice envice pelications manable Keys	EXT 1 EXT 1 EXT 2 EXT 3 EXT 3 EXT 5 EXT 6 EXT 7	tus Accounts Settin Mode Speed Dial Speed Di	gs Network Account	Description • Description	Phonebook Value	Version 1.0.5.7
distream al Settings alures Source Control Control Settings and Time envice envice envice envice envice envice envice	EXT 1 EXT 2 EXT 3 EXT 4 EXT 4 EXT 5 EXT 6 EXT 7 EXT 4	tus Accounts Settin Node Speed Dial Speed Di	gs Network Account Account Account 1 	Description • Description	Value Value Value Value Value Value Vabe Vabe Vabe Vabe Vabe Vabe Vabe Vab	Version 1.0.8.7
Visition al Settings atures one Control Control Splay and Time ervice ervice annable Keys ion Boards 1	EXT 1 EXT 2 EXT 3 EXT 4 EXT 4 EXT 5 EXT 6 EXT 7 EXT 8 EXT 9	tus Accounts Settin Node Speed Dial Speed Di	gs Network Account * Account * Account * Account * Account * Account * Account * Account * Account * Account * Account * Account * Account * Account	Description • Description	Phonebook Value Value Value Vabe Vabe Vabe Vabe Vabe Vabe Vabe Vab	Version 1.0.8.7



het gebruik van ZPEAK.

Grandstream GXP2110				Admin Logout Reboot English]
Grindstream	Status Accounts	Settings Network	Maintenance	Phonebook Version 10.6.7	
Settings	General Settings	6		The short 1 Co.C.F	•
General Settings Call Features Ring Tone Audio Control LCD Display Date and Time	Local RTP Port Use Random Port Keep-Alive Interval Use NAT IP	5004 No @ Yes 20	l S r	Use Random Port: YES Default waarde is no; zet deze op spraakverkeer gemakkelijker door navigeert.	YES zodat het ' uw netwerk
Web Service XML Applications Programmable Keys Extension Boards - EXT 1 EXT 2	STUN server Public Mode Public Mode Login Expiration	No Yes Save and Apply	Reset		
		n verste er nin handelige	Copyright © G	Grandstream Networks, Inc. 2014. All Rights Reserved.	
Settings General Settings Call Features Ring Tone Audio Control LCD Display Date and Time Web Service XML Applications Programmable Keys Extension Boards – EXT 1	Call Features Off-hook Auto Dial Off-hook Timeout Intercom User ID Disable Call Waiting Disable Call Waiting Tone Disable Call Waiting Tone Disable Direct IP Call Use Quick IP Call Mode Disable Conference	30 * No © Yes * No © Yes	(a c	Dok op deze pagina kunt u een aantal persoonlijke voorkeuren aangeven inzake het werken van de telefoon.	
Dok op tabbladen Audio Control (geluidssterkte), LCD Display (Schermcontrast), Date and Time (datum en tijd) vindt u instellingen die ervoor zorgen dat uw telefoon op de gewenste manier werkt.	Disable in-call DTMF Display Enable Sending DTMF via Speed Dial Disable DND Button Enable Idle Mute Disable Transfer In-call Dial Number on Pressing Transfer Key Auto-Attended Transfer Do Not Escape '#' as %23 in SIP URI Click-To-Dial Feature Call History Flash Writing	No @ Yes Disabled @ Enabled 0 means this option is disa	bled		
	Write Timeout Max Unsaved Log	200 Save Save and Apply R	eset		



ettings	Progr	ammable Keys					
General Settings	-		Contenting of				
Call Features	Line Keys						
Ring Tone		Mode		Account	Description	Value	
Audio Control	LINE 1	LINE	•	Account 1 🔻	Description	Valu	Hier kunt u instellen welke van uw
LCD Display	LINE 2	LINE	۲	Account 2 •	Description	Valu	liintoetsen (naast uw display)
Date and Time	LINE 3	LINE	•	Account 3 🔻	Description	Valu	worden gebruikt.
Web Service	LINE 4	LINE	•	Account 4 •	Description	Value	
Programmable Keys							
Extension Boards	– Multi-Pur	pose Keys	15.45				
EXT 1		Mode		Account	Description	Value	
EXT 2	MPK 1	Busy Lamp Field (BLF)	۲	Account 1 🔻	Richard	001	
	MPK 2	Busy Lamp Field (BLF)	•	Account 1 •	Heleen	002	Hier kunt u de Multi Purpose
	МРК З	Busy Lamp Field (BLF)	۲	Account 1 •	Jacob	003	voor BLF: zien of een collega
	MPK 4	Busy Lamp Field (BLF)	•	Account 1 🔻	Herman	004	vrij is, gebeld wordt of in
	MPK 5	Busy Lamp Field (BLF)	•	Account 1 •	Ria	005	gesprek is.
	MPK 6	Busy Lamp Field (BLF)	•	Account 1 •	Elly	006	Zie ook de aparte handleiding
	MPK 7	Busy Lamp Field (BLF)	•	Account 1 •	Ginette	007	voor Simmpl BLF instellingen.
	MPK 8	Busy Lamp Field (BLF)	•	Account 1 •	Jeroen	008	
	MPK 9	Busy Lamp Field (BLF)	•	Account 1 •	Jork	009	
					Towner.		

						Version 1.0.
ettings	EXT 1	L				
General Settings						
Call Features		Mode	Account	Description	Value	
Ring Tone	EXT 1	Speed Dial 🔻	Account 1	Description	Value	
Audio Control	EXT 2	Speed Dial 🔹	Account 1	Description	Value	
LCD Display	EXT 3	Speed Dial 🔹	Account 1	Description	Value	
Date and Time	EXT 4	Speed Dial	Account 1	Description	Value	
Web Service	EXT 5	Speed Dial 🔹	Account 1	Description	Value	
XML Applications	EXT 6	Speed Dial 🔹	Account 1	Description	Value	
Programmable Keys	EXT 7	Speed Dial	Account 1 V	Description	Value	
Extension Boards	-	Opened Diel][Description		
EXT 1	EXI 8	Speed Dial	Account 1	Description	Value	_
EXT 2	EXT 9	Speed Dial 🔹	Account 1	Description	Value	
	EXT 10	Speed Dial	Account 1	Description	Value	

De GXP21xx hebben de mogelijkheid om 1 of 2 Expansion Panels aan (uitbreidingsmodules) te sluiten. Op de Ext 1 en Ext 2 instellingspagina kunt u de buttonss programmeren. Afbeelding: GXP2140 + panel en GXP2200EXT + panel)





<u>Network</u>

Grandstream	Status Accounts S	ietting	s Ne	etwork	Maintena	nce Phonebook		
Network	Basic Settings					Version 1.0.6.7		
Advanced Settings	Internet Protocol	President of the second sec	efer IPv4	↓ © Prefe	r IPv6			
	IPv4 Address	O DHCP				In veel gevallen zal IP op DHCP staan: da betekent dat het toestel een IP-adres var		
	Host name (Option 12)					de router krijgt.		
	Vendor Class ID (Option 60)	GXP]	Soms echter is er een vast IP-adres ingesteld: zie bolletie:		
		© PP	PoE			[Statically configured as].		
	PPPoE Account ID]	Wat het beste is, hangt af van de situatie.		
	PPPoE password	[]			
	PPPoE Service Name							
		Statically configured as			as	Als er problemen zijn kan een VAST IP-		
	IPv4 Address	192	. 168	. 17	. 150	adres soms een verbetering opleveren;		
	Subnet Mask	255	. 255	. 255	. 0	om met deze gegevens omdat er ook veel		
	Gateway	192	- 168	. 17	- 254	fout kan gaan.		
	DNS Server 1	8	- 8	. 8	. 8	een probleemsituatie verbeteren. De		
	DNS Server 2	8	. 8	. 4	. 4	Google DNS-servers zijn:		
	Preferred DNS Server	0	. 0	. 0	. 0	0.0.0.0 En 0.0.4.4		
	IPv6 Address	Auto-configured •			•			
		® Fu	II Static		-			
	Static IPv6 Address].			
	IPv6 Prefix length							
		© Pre	efix Stat	ic	1			
	IPV6 Pretix (64 bits)							
	DNS Server 1	_			1			
	Droformed DNS Common							
	Preferred Dirs Server		Callenge and	- 14 - 14	Concession of the			
		Save	Save an	nd Apply	Reset			



Network Advanced Setting	S
Advanced Settings 802.1X Mode	Disable •
802.1X Identity	
MD5 Password	
802.1X CA Certificate	Upload Delete
802.1X Client Certificate	Upload Delete
HTTP Proxy	
HTTPS Proxy	
Layer 3 QoS	48
Layer 2 QoS 802.1Q/VLAN	0
Layer 2 QoS 802.1p Priority Value	0
PC port mode	Enabled Disabled Mirrored
Enable LLDP	Enabled Disabled
	Save Save and Apply Reset

Product-afbeeldingen





Link naar website fabrikant

http://www.grandstream.com/support/firmware http://www.grandstream.com/products/gxp_series/general/documents/gxp_usermanual_english.pdf

Resetten (zie pagina 44 van de manual):

- Via de ronde menutoets en de pijltjes kies [Configure] > [Factory Reset]
- Toets nu het MAC adres in (zie sticker onderzijde toestel en webinterface)
- Het toestel heeft een paar minuten nodig en komt dan blanco weer terug